

CUSTOMIZE PARAMETERS

HINT:

The following can be customized.

NOTICE:

- After confirming whether the items of the customer's request are applicable or not for the customized items, perform the customize operation.
- Be sure to record the current value before customizing.
- In case of performing the troubleshooting, pay attention as there is a possibility that the function is OFF by customizing. (Example: In case of the symptom in which "The wireless operation does not function" is displayed, check that the wireless operation is not OFF by customizing, then perform the troubleshooting.)

AIR CONDITIONER:

DISPLAY(ITEM)	DEFAULT	CONTENTS	SETTING
SET TEMP SHIFT (Set Temperature Shift)	NORMAL	To control with the shifted temperature against the display temperature.	+2C / +1C / NORMAL -1C / -2C
AIR INLET MODE (Air Inlet Mode)	AUTO	In case of turning the A/C ON when you desire to make the compartment cool down quickly, this is the function to change the mode automatically to RECIRCULATED mode.	MANUAL / AUTO
COMPRESSOR MODE (Compressor Mode)	AUTO	Function to turn the A/C ON automatically by pressing the AUTO button when the blower is ON and the A/C is OFF.	MANUAL / AUTO
COMPRS/DEF OPER (Compressor/Air inlet DEF operation)	LINK	Function to turn the A/C ON automatically linking with the FRONT DEF button when the A/C is OFF.	NORMAL / LINK
FOOT/DEF MODE (Foot/DEF auto mode)	ON	Function to turn the air flow from FOOT/DEF to ON automatically when AUTO MODE is ON.	OFF / ON
AUTO BLOW UP (Foot/DEF automatic blow up function)	ON	Function to switch the blower level automatically when the defroster is ON.	OFF / ON
FOOT AIR LEAK (Foot air leak)	ON	Function to cut off the airstream felt underfoot while the vehicle is moving	OFF / ON
AMBINT TMP SFT (Ambient Temperature Shift)	NORMAL	To control with the shifted ambient temperature against the display ambient temperature.	+3C / +2C / +1C NORMAL / -1C / -2C / -3C

BUZZER CANCEL SETTING

- Check that the ODO display is on, and turn the power switch off and then on. If other display is on, change it to the ODO display.
- Within 6 seconds, push and hold the ODO/TRIP switch for 10 seconds or more.
- Following the table below, set the buzzer cancel setting.

Buzzer	Operation
Seat belt buzzers for driver's seat	Driver's seat buckle switch OFF → ON (Seat belt unfastened → fastened)
Seat belt buzzer for passenger seat	Passenger seat buckle switch OFF → ON (Seat belt unfastened → fastened)

HINT:

The ODO/TRIP display changes from "b-on" to "b-off", entering the cancel mode.

- During the cancel mode, each time the ODO/TRIP switch is pushed, the setting is switched between*¹ b-on and *² b-off.

HINT:

*¹ b-on: Cancel is invalid

*² b-off: Cancel is valid

- After the setting, the mode will be canceled by either not operating the switch for 10 seconds or more, or turning the power switch from on to off.

HINT:

The setting can be reset when reconnecting the battery connector or removing/installing the meter connector(Buzzer on).

SMART ENTRY SYSTEM:

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
SMART WARN 1 (Warn key is taken from D-door with P position)	OFF	Function that warns driver that key is taken out from driver's door when shift position is in P and power switch is not OFF	ON/OFF
SMART WARN 2 (Warn key is taken from D-door without P position)	OFF	Function that warns driver that key is taken out from driver's door when shift position is not in P and power switch is not OFF	ON/OFF
SMART WARN 3 (Warn key is taken out by other passengers)	OFF	Function that warns driver that key is taken out from any door except driver's door by other passenger when power switch is not OFF	ON/OFF
SMART BUZ NUM (Setting number of warning buzzer sounds)	OFF	Function that sets number of key-taken-out warning buzzer sounds	ON/OFF
SMART WARN 4 (Warn locking door when Engine is idling)	2s	Function that sets warning time for locking doors while engine is idling	OFF/1s/2s
SMART WARN 5 (When when key is left in vehicle)	2s	Function that sets warning time for locking doors while key is inside vehicle	OFF/1s/2s
SMART WARN 6 (Warn starting E/G when key is out of detection range)	OFF	Function that warns driver that smart ignition control is attempted to be activated while key is out of detection range	ON/OFF
KEY LOW-BATT WRN (Warn when key battery becomes weak)	OFF	Function that warns driver that key's battery becomes weak	ON/OFF
KEY BATTERY BUZ (Key battery buzzer)	ON	Function that warns driver that smart key's battery is low	ON/OFF
BUZZER LENGTH (Buzzer length)		Function that sets warning time when key is taken out of vehicle, all doors are closed, trigger switch is on, shift position is P and power switch is not OFF	2s/1s/0s/OFF
DOOR OP-CL BUZ (Door open-close buzzer)	ON	Function that makes warning function available when key is taken out of vehicle, any door except driver door is open and closed, shift position is not in P and power switch is not OFF	ON/OFF
KEY IN LOCK BUZ (Key inside lock buzzer)	2s	Function that sets warning time when doors are locked with trigger switch while key is inside vehicle	2s/1s/0s/OFF
SMART IGNITION (Smart ignition)	ALL	Function that sets smart system warning range when smart ignition is performed and steering lock is canceled	FRONT/ALL
TRANSMIT INTVAL (Transmission interval)	300ms	Function that sets smart signal transmission intervals when vehicle is stopped and key is outside vehicle	150ms/300ms/ 450ms/600ms
PARK WAIT TIME (Wait time to permit opening door after locking)	3s	Function that sets waiting time to permit opening door after door is locked with smart lock function	1s/2s/3s/5.5s
SMART BACK DOOR (Backdoor opening operation when vehicle is locked)	LONG	Function that enables back door to open when key is inside luggage compartment	LONG/TWICE/OFF

WIRELESS DOOR LOCK (w/ Smart Entry System):

Display (item)	Default	Contents	Setting
Open Door Warn (Open door warning)	ON	If door is not completely closed and transmitter LOCK switch is pressed, this function makes buzzer sound for 10 seconds.	ON/OFF
Wirls Buzz Oper* (Buzzer answer-back of wireless)	ON	Function that makes wireless buzzer sound for answer-back when transmitter lock/unlock switch is pressed.	ON/OFF
Wireless Oper (Wireless door lock control function)	ON	Function that turns wireless door lock function ON/OFF.	ON/OFF
Auto Lock Delay (Auto lock time)	30s	This function controls amount of time from unlocking doors to automatic re-locking function.	30s/60s
Hazard Ans Back (Hazard answer-back of wireless)	ON	When lock switch on transmitter is pressed, this function illuminates all hazard warning lamps once. When unlock switch is pressed, all hazard warning lamps illuminate twice.	ON/OFF

*: Australia only

WIRELESS DOOR LOCK (w/o Smart Entry System):

Display (item)	Default	Contents	Setting
Open Door Warn (Open door warning)	ON	If door is not completely closed and transmitter LOCK switch is pressed, this function makes buzzer sound for 10 seconds.	ON/OFF
Wireless Oper (Wireless door lock control function)	ON	Function that turns wireless door lock function ON/OFF.	ON/OFF
Auto Lock Delay (Auto lock time)	30s	This function controls amount of time from unlocking doors to automatic re-locking function.	30s/60s
Hazard Ans Back (Hazard answer-back of wireless)	ON	When lock switch on transmitter is pressed, this function illuminates all hazard warning lamps once. When unlock switch is pressed, all hazard warning lamps illuminate twice.	ON/OFF

Theft Deterrent System

Item	Default	Contents	Setting
Intrusion Sen (Intrusion sensor)	ON	Function that turns intrusion sensor ON/OFF. This function is only available for vehicles with intrusion sensor.	ON/OFF